

# BLADE TYPE FUSES




## MINI Style

- » Standard on newer vehicles
- » Similar electrical characteristics in a smaller package than the ATO style
- » Used in a wide range of low voltage, automotive, and other electronic applications



## ATO Style

- » Standard type fuses
- » For low voltage use in motor vehicles
- » ISO 8820-3 and SAE J1284 standards
- » Most common for automotive and marine applications; but can be used in other electrical applications that require circuit protection
- » Commonly mounted in a fuse block, fuse holder, or panel

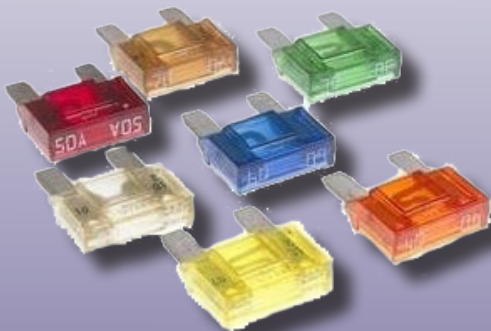

## MAXI Style

- » Heavy duty type fuses
- » Standard for vehicle circuit protection
- » Fast-acting and designed to provide predictable time delay and low heat dissipation
- » Used in low voltage, automotive, and electronic applications